

## PROGRAMMING A FOREST SHUTTLE MOTOR WITH SIDEKICK QUICK START GUIDE


BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS, YOU WILL SOON BE ENJOYING YOUR NEW MOTORIZED DRAPERY HARDWARE.

### First, put your Sidekick in Forest mode:

1. Press the menu button (back of the Sidekick). The STOP button will begin flashing
2. Press the CHANNEL 4 button. The STOP button continues flashing
3. Press the CHANNEL 2 button. The STOP button continues flashing
4. Press the STOP button. The following lights will flash in this order: CHANNEL 4, CHANNEL 2, ALL CHANNELS

### Programming Forest Shuttle Motor to the Sidekick Remote:

PRESS THE DESIRED CHANNEL 1-5

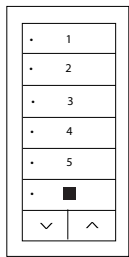


PRESS BUTTON 3x WITH A PEN



LED MOVES FROM 1st – 2nd – 3rd LED




KEEP BUTTON PRESSED FOR 5 SEC.

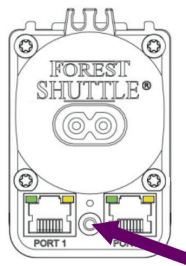

GREEN LEDS START BLINKING



WITHIN 10 SEC. PRESS OPEN

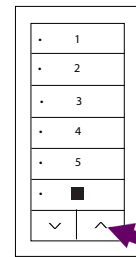


### Re-adjusting the open and close positions, if desired:


The OPEN and CLOSE end positions are already set for the drapery track. Adding extra carriers is taken into account.

If you need to change the end positions, take these steps **after moving drapery to the open position**. This will erase the factory settings.

PRESS BUTTON 4x WITH A PEN

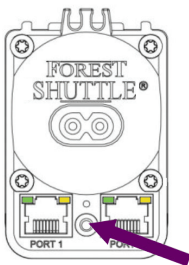

LED MOVES FROM 1st – 2nd – 3rd LED

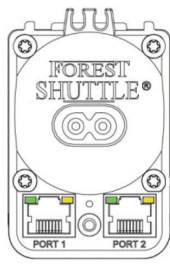

KEEP BUTTON PRESSED FOR 5 SEC.



YELLOW LED BLINKS AND GOES OFF



### Now you are ready to reset end positions:

1. Pull the drapery toward the closed position, drapery will close automatically.
2. Pull the drapery toward the open position, drapery will open automatically.
3. As soon as the motor stops in the open position, the yellow LED will light up. Now adjust drapery to the desired open position.
4. When the yellow LED goes off, the end positions are now stored in the motor's memory.