

DRESDEN CORDED COLLECTION INSTALL INSTRUCTIONS

YOU HAVE RECEIVED A PRE-ASSEMBLED ROD SYSTEM

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS, YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.


Getting Started:

Please read through all instructions carefully before you begin. Unpack all materials making sure all components are included:

- Back plate
- Decorative faceplate
- Bracket attachment shaft
- Bracket set screw and hex key
- Bracket unit
- Rail holding set screw
- Rail
- Finials
- Break-away tension pulley

Tools You Will Need:

- Drill with a 1/8" bit and a Phillips bit
- Phillips screwdriver
- Metal tape measure

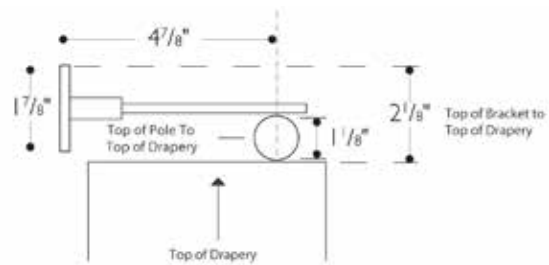

Installing Your Dresden Corded Drapery Hardware:

You are now ready to install your drapery hardware.

1. Measure

Rails are pre-cut and corded to your specifications. Measure drapery panel length and add desired distance from the floor to bottom hem then add 2 1/8" for bracket height.

2. Mark

Mark the height you would like the top of the bracket to be installed. Note: The top of drapery will hang down approx. 1 1/8" from bottom of rail to top of drapery.

3. Mount

Attach your back plates to your desired area. Drill screws through holes for a secure mount. Repeat this process for all other brackets.

4. Attach Bracket

- a. Place decorative faceplate over the back plate.
- b. Screw the bracket attachment shaft onto the threaded part of the back plate.
- c. Place your bracket unit onto the bracket attachment shaft.
- d. Screw bracket set screw (with included hex key) into the hole on the top of the bracket unit closest to the wall until it is tight.

5. Attach Rail

- a. Make sure the rail holding set screw is attached to the bracket unit loosely (you should receive it this way).
- b. Push your rail up into the bracket unit and tighten the rail holding set screw (with included hex key) on the top of the bracket unit.

6. Attach Finials

Attach finials to both ends of the rail.



Wall Mount Installation



Ceiling Mount Installation

49500-00 TENSION DEVICE FOR CHILD SAFETY ASSEMBLY & INSTALLATION INSTRUCTIONS

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS, YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.

Getting Started:

Please read through all instructions carefully before you begin.

Unpack all materials making sure all components are included:



Base



Guide



Insert



Spring



Screws (2)

Tools You Will Need:

- Needle nose pliers
- Phillips screwdriver or drill with Phillips bit
- Optional anchors if needed

Installing The 49500-00 Tension Device:

This guide will assist you in assembling the tension device and installing it onto the wall.

1. Slide bead chain or cord through base entering through the rounded part of the base following through the flat end.
2. Slide the same end of the bead chain or cord through the spring following the base.



3. Hook the guide through the end of the bead chain or cord.
4. Pull the spring back down the chain so it is completely over the guide and rests on the bottom legs.



5. Using needle nose pliers, grasp entire spring on both sides with the guide legs pointing up and squeeze until completely compressed together. HINT: Keep pliers all the way to one side (next to one leg of the guide) to allow room for insert to be pushed through in Step 6.
6. Once the spring is fully compressed, turn insert on an angle and push through the guide legs.



7. Turn the insert flat and then release the spring. For cord, the serrated edge should face cord. For bead chain, the smooth edge should face chain.
8. Slide base back down the bead chain or cord and over the guide.



9. Pull tension device down until chain is taut but not tight. Using screws provided and Phillips screw driver or drill bit, secure base to wall. Make sure to secure the base in a location that will not interfere with drapery or shade movement. Use anchors if needed.

