

# SPLICED MOTORIZED TRACK ASSEMBLY INSTRUCTIONS

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS, YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.

#### **Getting Started:**

Please read through all instructions carefully before you begin.

Unpack all materials making sure all components are included:


- Track(s), assembled and folded
- Motor Pulley Housing(s), one per system
- Motor Pulley Wheel(s), one per system
- Motor Pulley Cover(s), with 1 fastener and 4 screws per cover

#### **Tools You Will Need:**

- Drill with a 1/8" bit and a Phillips bit
- Phillips screwdriver


### For FMS Track Systems:

#### 1. Unpack Carefully unpack your track. Note that it wil be folded in half.




#### 2. Unfold Track

Fully unfold the track.




## 2. Straighten

Ensure the belt is straight.




#### 3. Configure Belt


Hold the exposed end of the belt in place while pulling the track away from it. Pull untilthe two pieces of the track are touching.




**4.** Attach Plulley Housing Slide the pulley housing on the end of the track and place the wheel inside the pulley housing.

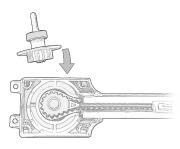

5. Attach Fastener Slide the fastener into the track.



**6.** Attach Cover Place the cover on the pulley. Secure it using the four included screws and the fastener.



Need more help? The Forest YouTube Channel is 24/7 Technical Support



Watch the spliced motorized track assembly video