

RTS RECESS TRACK SYSTEM INSTALLATION INSTRUCTIONS

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS,
YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.

Getting Started:

Please read through all instructions carefully before you begin.

Unpack all materials making sure all components are included:

- Track(s) pre-assembled to your specifications
- Recess Profile
- Fixing Strip



Tools You Will Need:

- Drill with a 1/8" bit and a Phillips bit
- Phillips screwdriver
- Metal tape measure

Recess Ceiling Mount Instructions:

Installing Your Drapery Track:

- 1. Mark**
Insert recess profile into pre-made recessed pocket in ceiling. Mark the screw hole locations pre-drilled into profile.
- 2. Mount**
First pre-drill holes for screw diameter when mounting into wood frame of window or wall stud. Otherwise, pre-drill and install anchors first before fastening with screws.
- 3. Insert Track**
Insert the track into the recess profile.
- 4. Insert Track**
Place the track into the recess profile.
- 5. Insert Fixing Strip**
Insert the fixing strip into the recess profile to secure the track.

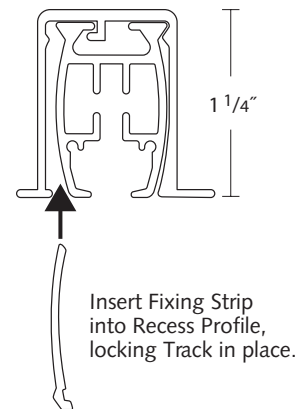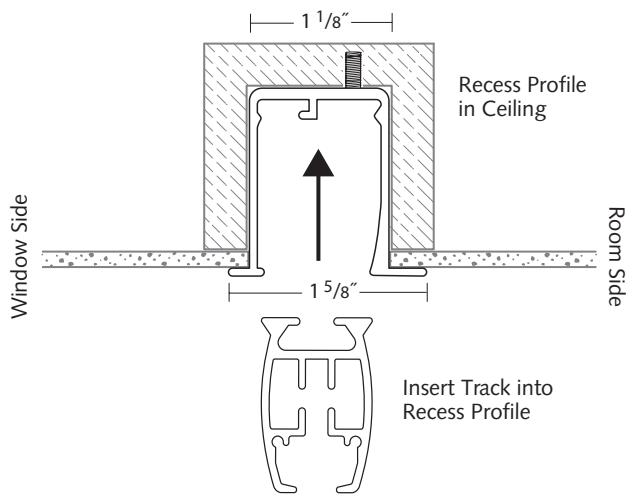

The Forest YouTube Channel is 24/7 Technical Support



Watch the RTS Recess Track System
Installation Video



Go to the Forest YouTube Channel