

SEVILLE 1 3/8" COLLECTION INSTALL INSTRUCTIONS

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS, YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.

Getting Started:

Please read through all instructions carefully before you begin installation.


Open the tube by prying open the end with a screwdriver.
Unpack all materials making sure all components are included:

- Pole
- Drapery rings
- Mounting brackets
- Finials

Please note that your brackets must be securely attached to the mounting surface.
If your screws do not hit wood studs you'll have to use a different fastener, which can be found at any local hardware store.

Tools You Will Need:

- Drill with a 1/8" bit and a Phillips bit
- Phillips screwdriver
- Metal tape measure
- Hacksaw (optional)

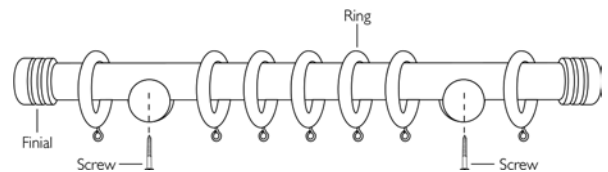

Installing Your Wood Drapery Hardware:

You are now ready to install your hardware.

1. Measure

Measure the area you are covering and cut down pole if needed with hacksaw. Poles are pre-cut to your specified size.

2. Mark

Mark the height you would like the top of drapery pole to be installed.
Note: The top of the drapery will hang down approx. 2" from the top of the pole.

3. Mount

1" down from mark make a second mark and pre-drill a small hole at this mark using a 1/8" drill bit or a starter nail (we recommend using a molly plug to ensure secure mount if not installing directly into wood). Install bracket by screwing into hole. Turn clockwise until secure and in correct position to accept pole. Do not over tighten. Your first mark should be level with the top of the bracket.

4. Attach Rings and Poles

Slide rings onto pole. You may want to leave one ring on the outside of each of the end brackets. Set the pole on the brackets.

5. Attach Finials

Attach finials to both ends of the pole.

