

FMS® INSTALL INSTRUCTIONS

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS, YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.

Getting Started:

Please read through all instructions carefully before you begin.

Unpack all materials making sure all components are included:

- Track(s)
- Master carrier(s) & carriers (pre-installed within track)
- Mounting brackets
- Splice, if requested

Tools You Will Need:

- Drill with a 1/8" bit and a Phillips bit
- Phillips screwdriver
- Screws for mounting brackets
- Metal tape measure
- Hack saw (optional)

Wall Mount Instructions:

Installing Your Drapery Track:


1. Measure

Determine the height of the top of track and mark bracket height on the wall for all the brackets and adjust (as necessary) to make sure they are all leveled.


2. Mark

Measure the width of the track and mark the two end brackets approximately 3" - 4" in from the ends of the track. Evenly space the remaining brackets and place corresponding marks.

3. Mount




To attach the bracket to the wall; first pre-drill holes for screw diameter when mounting into wood frame of window or wall stud. Otherwise, pre-drill and install anchors first before fastening with screws.




4. Attach Bracket

Place the track into the bracket as shown in the drawing; applying pressure until track "clicks" into bracket. Make sure track set screw is loose enough to allow the track retainer to flex. Repeat this step for the remaining brackets.




5. Tighten

Tighten track set screws on all the brackets to secure track to brackets.



6. Adjust Projection

Adjust track to the desired projection. Projection is adjustable from $3'' - 4 \frac{1}{2}''$. Repeat this step for the remaining brackets.




Once desired projection is set for all the brackets, lock the bracket into position by tightening the track depth adjustment set screw (see drawing below).

Installing Splice, if requested:

For wide areas, tracks will be shipped in multiple pieces and will require a splice.

- Slide the track of the connecting ends on each track into the channel of the splice and butt ends together.
- Tighten locking screw with hex key for a secure fit.



FMS® INSTALL INSTRUCTIONS (CONTINUED)

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS. YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.

Ceiling Mount Instructions:

Installing Your Drapery Track:

1. Measure

Measure the width of the track and mark the two end brackets approximately 3" - 4" in from the ends of the track. Evenly space the remaining brackets and place corresponding marks.

2. Mount

To attach the bracket to the ceiling; first pre-drill holes for screw diameter when mounting into wood frame of window or wall stud. Otherwise, pre-drill and install anchors first before fastening with screws.


3. Attach Bracket

Place the track into the bracket as shown in the drawing; applying pressure until track "clicks" into bracket. Make sure track set screw is loose enough to allow the track retainer to flex. Repeat this step for the remaining brackets.

Set Screw

4. Tighten


Tighten track set screws on all the brackets to secure track to brackets.



Installing Splice, if requested:

For wide areas, tracks will be shipped in multiple pieces and will require a splice.

- Slide the track of the connecting ends on each track into the channel of the splice and butt ends together.
- The tracks will snap together. Press together and confirm a tight fit.
- Secure with additional screw.





FOREST SHUTTLE MOTORS QUICK START GUIDE

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS, YOU WILL SOON BE ENJOYING YOUR NEW MOTORIZED DRAPERY HARDWARE.

Getting Started:

Please read through all instructions carefully before you begin.

- Make sure to check these items before programming:
- Motor is plugged in
- Batteries are in the remote or wall switch
- Drapes are in the open position

Technical Specifications:

- Voltage: 24Vdc
- Max. power: 65W
- Torque: 1.5Nm
- Speed: 15cm/sec

Programming Instructions:


- Before running the motor, make sure drapes are in the open position.
- Turn motor into motor pulley and lock in place.
- Plug motor into outlet.
- Tug master carriers toward the closed position (drapes covering window) – they will move automatically.
- After fully closed, tug masters back to the open position they will move automatically.
- Once fully opened, a yellow LED light will be lit on the bottom of the motor. While lit, you have 10 seconds to move the master carriers to whatever stacking position you desire.
- Make sure battery is in remote or wall switch.
- Go to the channel you want to program drapery motor to be on when using the remote or wall switch.
- Press the programming button on the bottom of the motor three times. You will see it switch from a green to yellow and back to green LED. After third press (ending up on green LED), let go and quickly press and hold, green LED will start flashing.
- While the LED is flashing green, press open on the remote or wall switch. Green LED will stop flashing.
- Press close to see if draperies start moving. If they do, you are finished. If not, go back to the beginning and start over.

Resetting Motor to Factory Default

- Resetting the motor to factory default settings will erase any limits and or program setting made prior.
- Press the programming button on the bottom of the motor 16 times. The LED's will correspond switching from green to yellow and so on.
- You will end up on a yellow LED after pressing 16 times. Quickly let go, then press and hold yellow LED will start flashing.
- Let flashing yellow LED time out.

Resetting Limits

- Start with drapes in the open position.
- Press programming button 4 times, it will correspond with blinking LED's green, yellow, green, yellow.
- End up on yellow LED and quickly let go and yellow LED will start flashing.
- Let flashing yellow LED time out.
- Tug drapes toward close position and let them close all the way.
- Tug drapes toward open position and let them open all the way.
- Yellow LED will be lit, you have 10 seconds to move drapes to proper stacking position.

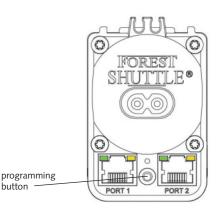

Warranty Disclaimer

The Forest Shuttle is not suitable for humid spaces, like bathrooms or outside. Forest does not assume liability for resulting damages to property or personal injury if the product has been abused in any way or damaged by improper use or failure to observe these operating instructions.



Scan or click this QR Code to go directly to the Shuttle programming video on the Forest YouTube channel.