

## LONDON TRAVERSING INSTALLATION INSTRUCTIONS

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS, YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.

### Getting Started:

Please read through all instructions carefully before you begin.

Unpack all materials making sure all components are included:

- Routed wood pole
- Aluminum traversing track (assembled with carriers)
- Wall-mount brackets
- #6 x 3/4" wood screws for mounting wood pole to bracket
- Decorative finials (if ordered)

### Tools You Will Need:


- Drill with a 1/8" bit and a Phillips bit
- Phillips screwdriver
- Metal tape measure

### Installing Your London Traversing Hardware:


Your routed wood drapery pole has been sent partially assembled. You will need to hang the drapery pole with the brackets, secure the pole and track and hang your drapes.

This guide will assist you in installing your brackets into the wall, mounting the wood pole to the bracket, and inserting the track into the wood pole assembly.


1. Install bracket to the wall using standard installation methods. Mounting screws not included, different anchors or screws are needed depending on mounting surface.

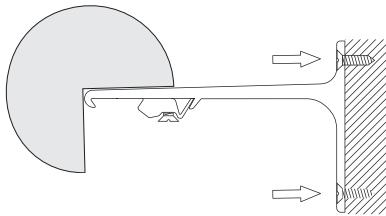

2. Attach wood pole to brackets using the #6 wood screws included. Start 4" from each side for right and left brackets, then install center support(s).

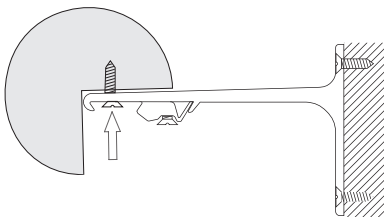

3. Loosen Smart-Klick fastener screw. Place track into bracket, applying pressure until the track clicks into place.

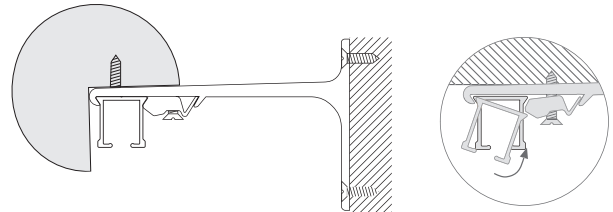

4. Tighten screw (careful not to over-tighten) to lock the track into place.

