

## CORDOBA COLLECTION INSTALL INSTRUCTIONS

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS, YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.

### Getting Started:

Please read through all instructions carefully before you begin installation.


### Unpack all materials making sure all components are included:

- Pole (s)
- Drapery rings
- Mounting brackets with Allen key
- Finials

Please note that your brackets must be securely attached to the mounting surface. If your screws do not hit wood studs you'll have to use a different fastener which can be found at any local hardware store.

### Tools You Will Need:

- Drill with a 1/8" bit and a Phillips bit
- Phillips screwdriver
- Metal tape measure
- Hacksaw or regular saw (optional)

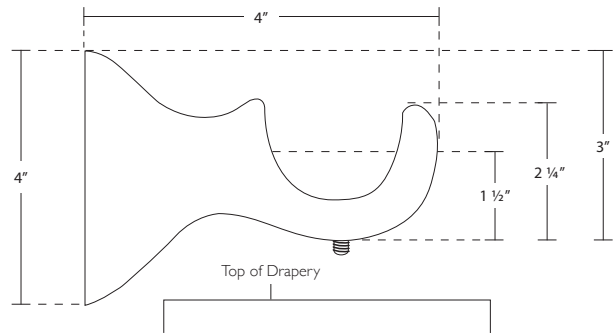

### Installing Your Cordoba Wood Drapery Hardware:

You are now ready to install your hardware.

#### 1. Measure

Poles are cut to your specified size. Measure the area you are covering and cut down pole accordingly. Cut with hacksaw.

#### 2. Mark

Mark the height you would like the top of drapery pole to be installed at. Note: The top of the drapery will hang down approx. 3" from the top of the pole.

#### 3. Mount

Place top of bracket 1/2" above marked height. Drill in screws through the top and bottom holes for a secure mount. Repeat this process for all other brackets you install.

#### 4. Attach Rings and Poles

Slide rings onto pole. You may want to leave one ring on the outside of each of the end brackets. Set the pole on the brackets. (when installing hardware for areas over 8" wide it is advisable to buy a double-sided screw to securely join poles.)

#### 5. Attach Finials

Attach finials to both ends of the pole.

#### Optional

All pole sets over 96" will come as 2 poles. A center bracket must be used over where the poles meet.

- Screw wood pole connector into center of each pole.
- Ensure wood pole connector is screwed into each pole at equal depths.
- Tighten until poles meet.

