

RTS RECESS TRACK SYSTEM INSTALLATION INSTRUCTIONS

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS,
YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.

Getting Started:

Please read through all instructions carefully before you begin.

Unpack all materials making sure all components are included:

- Track(s) pre-assembled to your specifications
- Recess Profile
- Fixing Strip

Tools You Will Need:

- Drill with a 1/8" bit and a Phillips bit
- Phillips screwdriver
- Metal tape measure

Recess Ceiling Mount Instructions:

Installing Your Drapery Track:

1. Mark

Insert recess profile into pre-made recessed pocket in ceiling.
Mark the screw hole locations pre-drilled into profile.

2. Mount



First pre-drill holes for screw diameter when mounting into wood frame of window or wall stud. Otherwise, pre-drill and install anchors first before fastening with screws.

4. Insert Track

Place the track into the recess profile.

5. Insert Fixing Strip

Insert the fixing strip into the recess profile to secure the track.

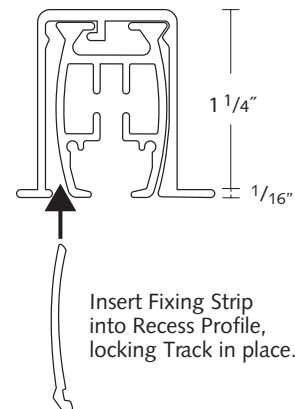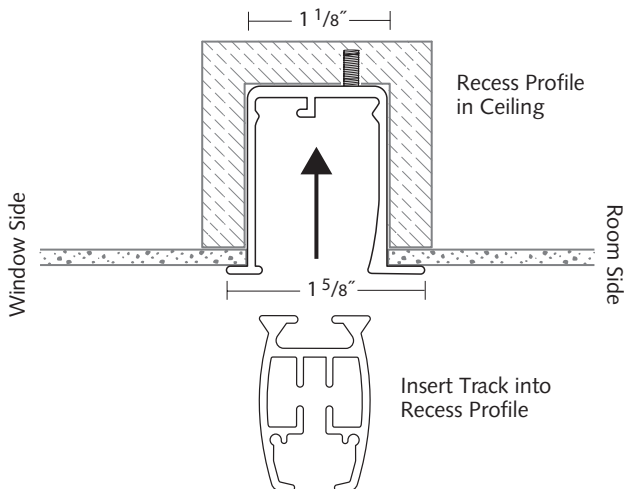

The Forest YouTube Channel is 24/7 Technical Support



Watch the RTS Recess Track System
Installation Video



Go to the Forest YouTube Channel