

CS RECESS INSTALL INSTRUCTIONS

BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS,
YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.

Getting Started:

Please read through all instructions carefully before you begin.

Unpack all materials making sure all items are included:


- Track(s) with holes pre-drilled every 10 inches.

Tools You Will Need:

- Drill with a 1/8" Phillips bit
- M3 x 25mm screws are recommended. Please choose screws appropriate for the material you are installing into.


Installing Your Drapery Track:

1. Prepare the area for installation based on the measurements below

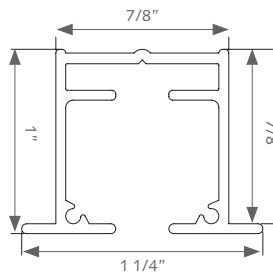

2. Please note


There is a channel at the top of the profile which prevents the installation screws from interfering with the carrier movement.

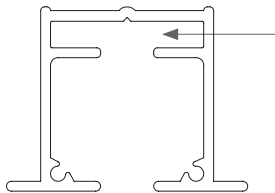

3. Mount

To attach the track, hold it securely in place and drill screws directly through the pre-drilled holes in the track. Pre-drilled holes are every 10".

M3 x 25mm screws are recommended when attaching to wood. Always choose the appropriate screw for the material you are drilling into. *Optional:* pre-drill holes for screw diameter if mounting into wood.

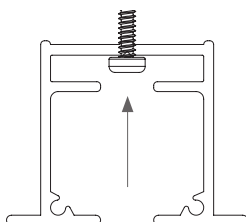

4. Insert Carriers & Masters

Slide carriers and masters into track channel finishing ends with end caps as necessary.

5. Insert End Stops

Where applicable, insert Twist On End Stops to hold ending carrier(s) in place.