

ROTTERDAM RECTANGLE RAIL COLLECTION INSTALL INSTRUCTIONS

YOU HAVE RECEIVED A PRE-ASSEMBLED SYSTEM. BY SIMPLY FOLLOWING THESE STEP-BY-STEP INSTRUCTIONS, YOU WILL SOON BE ENJOYING YOUR NEW DRAPERY HARDWARE.

Getting Started:


Please read through all instructions carefully before you begin.

Unpack all materials making sure all components are included:

- Rails built to your specifications
- Mounting bracket and back plate
- Allen keys (2)
- Finials
- Rail Connector (optional)

Tools You Will Need:

- Screws and anchors (optional) appropriate for the material you will be drilling into
- Drill with a 1/8" bit and a Phillips bit
- Phillips screwdriver
- Metal tape measure

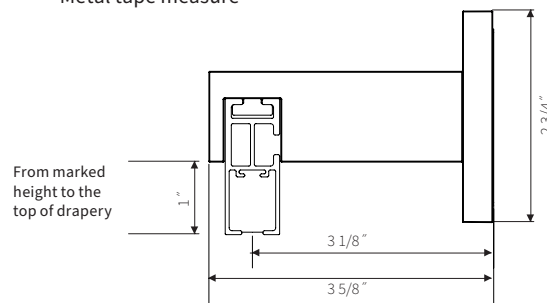

Installing Your Wall Mount Drapery Hardware:

Please read through all instructions carefully before you begin.

1. Mark


Mark the height you would like the top of the top of your drapery to be installed, taking into account any clearance or puddling you desire at the bottom. Add 1" to this height to mark the location of the bottom screw.

2. Mount

Measure the width of the track. Mark the placement of the two end brackets at the height determined in step 1, approximately 3"-4" in from the ends of where the track will be installed.

Take the back plate off the bracket and place the top of the bottom hole at marked height. Remove the back plate from bracket by loosening the set screw on the bottom.

NOTE: The top of bracket will rise 2 1/8" above the mark.

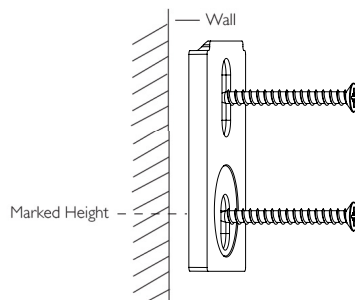

3. Assemble Bracket

Reassemble the bracket onto the back plate. Tighten set screw. Make sure bracket is facing down.


4. Attach Rail to Bracket

Make sure t-nut is attached to the bracket loosely (you should receive it this way). Attach the rail to the brackets by slipping t-nut into top channel. Lock the rail into the top channel using included Allen key to tighten set screw.

If there is not enough space to attach the rail in this manner you will need to remove the t-nut from the bracket. Slide the t-nut into the rail, align with bracket, and tighten the set screw.

5. Attach Finials

Attach finials to both ends of the rail.

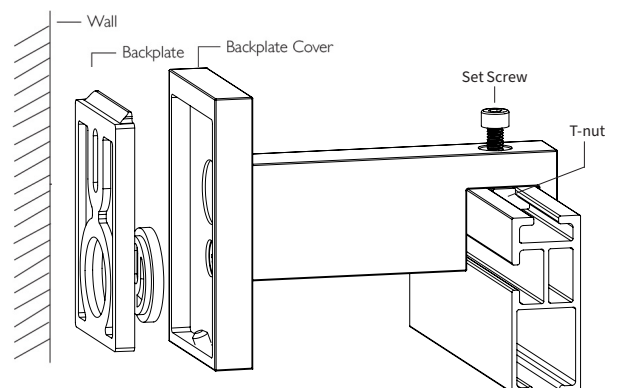


ROTTERDAM RECTANGLE RAIL COLLECTION

INSTALL INSTRUCTIONS (continued)


PLEASE SEE ADDITIONAL BRACKET OPTIONS BELOW. FOLLOW SAME INSTALLATION INSTRUCTIONS AS ON THE PREVIOUS PAGE AND TAKING MEASUREMENTS INTO ACCOUNT.

Wall Mount Brackets:

Single wall bracket 53405-XX

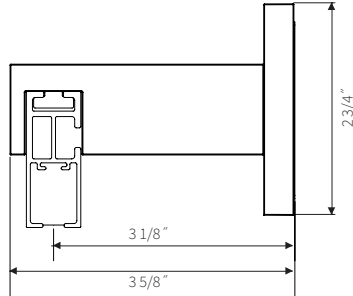

Double wall bracket 53411-XX

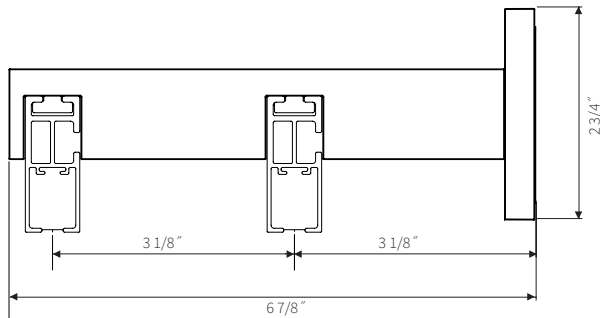

Installing a Rail Connector:

Please read through all instructions carefully before you begin.

1. Insert the Rail Connector into the top channel of one of the tracks.
2. Tighten two set screws securely with included Allen Key.
3. Once both tracks have been attached to mounting brackets, butt the two tracks up against one another and ensure they line up seamlessly. Make sure the "arm(s)" of the master carrier(s) are facing into the room.
4. Tighten the other 2 set screws on the Rail Connector.

